


Create Yard Vehicle in ContiConnect with Hand Held Tool (HHT)


Scan for video walk-through, other trainings, and Spanish translations.




Time estimate: **5-10 min**

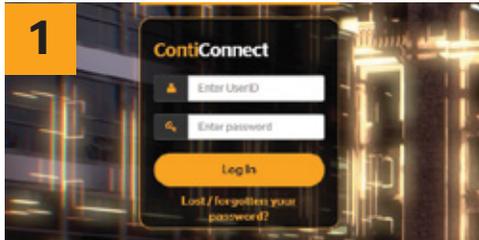


Once all tire positions have been scanned with the HHT, you can begin creating a new vehicle in the ContiConnect web portal.

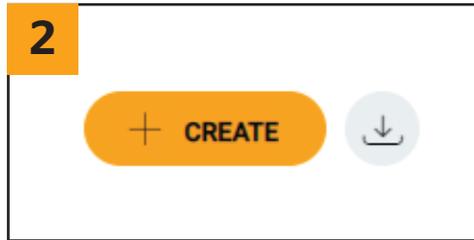


Click '+ Create' in the top right-hand corner of the screen.

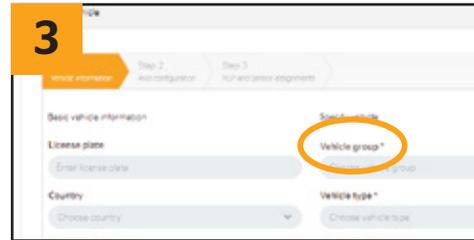


Fill in all information indicated with a *. You must also fill in a vehicle identifier, such as license plate, customer vehicle ID, or VIN. If you input the license plate, you must also select your country.

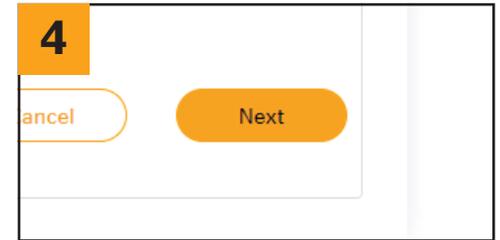


Click 'Next'.

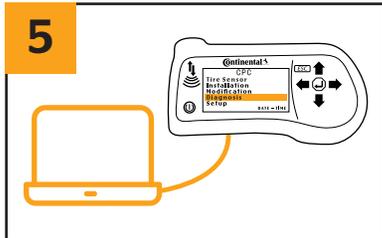


Plug the provided USB cable into the HHT and plug the other end into your computer. If you have not programmed sensors with the HHT, skip to step 11.

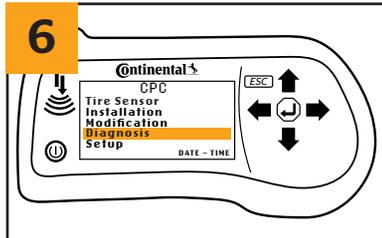


On the HHT, click 'Diagnosis'.

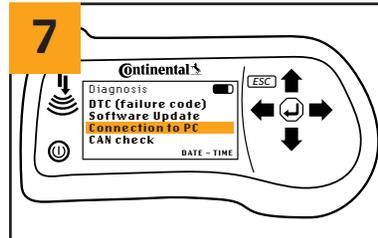


On the HHT, click 'Connection To PC'.

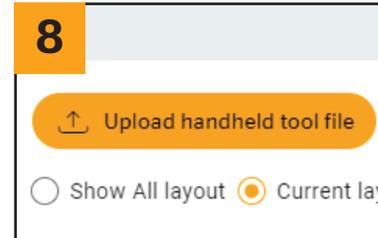

On the ContiConnect web portal, click upload 'HHT File'.

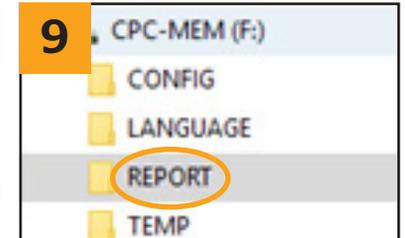


A drive will appear on your computer titled 'CPC-MEM.' Navigate to the 'REPORT' folder within this drive.

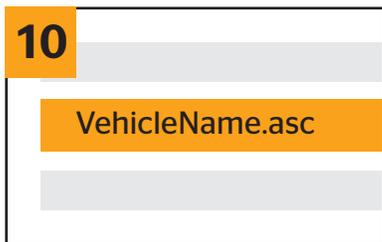


Select the vehicle name you're creating on ContiConnect and click 'Open'.



Ensure that ContiConnect has automatically selected the correct axle configuration. If you did not upload a HHT file, manually select your vehicle's axle configuration.

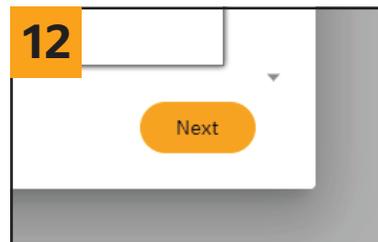

Click 'Next'.

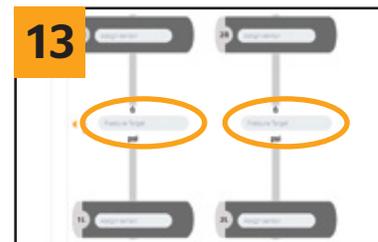

On the next screen, enter the recommended cold pressure and then click 'Create.' If you uploaded a HHT file, you will see your current sensor IDs for each tire position that's been programmed.



Your new vehicle has been created in ContiConnect.